

A 518 – 554 Mhz

TV-Channel
 Ch. 22 (518-524 Mhz) Ch. 23 (524-530 Mhz)
 Ch. 24 (530-536 Mhz) Ch. 25 (536-542 Mhz)
 Ch. 26 (542-548 Mhz) Ch. 27 (548-554 Mhz)

	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8	Bank U
1	518,150	529,850	530,150	536,550	542,350	553,850	520,775	538,775	519,500
2	518,850	528,950	531,150	538,350	543,150	552,850	521,500	540,000	522,500
3	519,750	528,150	531,650	538,750	543,650	552,450	526,100	549,500	528,500
4	520,950	526,950	532,250	539,850	544,650	551,750	528,025	551,000	538,500

TV Chan.⇒ 22 23 24 25 26 27 22, 23 25, 27 22, 23, 25

B 626 – 662 Mhz

TV-Channel
 Ch. 40 (626-632 Mhz) Ch. 41 (632-638 Mhz)
 Ch. 42 (638-644 Mhz) Ch. 43 (644-650 Mhz)
 Ch. 44 (650-656 Mhz) Ch. 45 (656-662 Mhz)

	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8	Bank U
1	661,850	650,150	649,750	638,350	637,850	626,150	627,250	632,225	656,025
2	660,950	651,150	649,250	638,850	637,450	627,050	627,750	632,975	657,500
3	660,550	651,650	648,550	640,050	636,750	627,750	644,250	646,300	660,500
4	659,350	652,250	647,950	640,950	636,150	628,550	647,500	648,975	660,900

TV Chan.⇒ 45 44 43 42 41 40 40, 43 41, 43 45