

A 518 – 554 Mhz

US TV-Channel
 Ch. 22 (518-524 Mhz) Ch. 23 (524-530 Mhz)
 Ch. 24 (530-536 Mhz) Ch. 25 (536-542 Mhz)
 Ch. 26 (542-548 Mhz) Ch. 27 (548-554 Mhz)

Channel	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8
1	518,400	523,400	521,800	518,500	518,300	518,100	519,300	520,525
2	519,200	523,800	522,400	520,750	520,975	518,900	520,100	521,550
3	520,600	525,400	524,000	521,500	524,000	519,300	522,500	536,500
4	521,200	527,800	531,400	525,300	525,500	521,900	523,900	539,925
5	527,800	530,000	533,400	532,900	532,000	522,500	525,100	541,300
6	529,000	533,600	534,400	534,100	533,900	524,300	525,500	523,125
7	529,400	536,800	537,000	538,225	540,700	525,300	534,100	529,475
8	535,200	541,000	539,800	544,025	546,025		535,100	537,100
9	544,400	548,000	541,200	550,100	549,900		536,900	543,150
10	546,800	548,800	541,600	552,025	550,300		541,100	548,625
11	551,400	550,600	545,600	553,500	551,000		541,700	
12	552,400	551,800	550,400					

B 626 – 662 Mhz

US TV-Channel
 Ch. 40 (626-632 Mhz) Ch. 43 (644-650 Mhz)
 Ch. 41 (632-638 Mhz) Ch. 44 (650-656 Mhz)
 Ch. 42 (638-644 Mhz) Ch. 45 (656-662 Mhz)

Channel	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8
1	626,200	629,000	626,400	638,500	628,250	626,225	626,025	630,300
2	631,600	629,800	627,800	639,100	633,250	628,900	628,000	631,500
3	632,800	630,200	629,400	643,300	633,750	630,100	629,100	632,400
4	635,200	632,400	630,600	643,700	635,500	638,500	634,775	635,100
5	638,000	637,000	639,200	645,500	639,500	645,700	644,000	636,750
6	638,400	638,400	642,600	654,500	642,500	646,100	645,500	644,150
7	639,000	644,000	643,600	655,700	643,750	650,975	648,225	647,200
8	647,200	648,400	648,600	657,700	647,250	656,775	648,975	651,350
9	651,600	653,600	652,600	658,500	650,500	657,500	653,500	661,400
10	654,200	656,000	653,200	660,100	655,750	658,975	660,700	
11	658,800	657,600	659,000	661,100	659,500	660,900	661,100	
12	661,800	661,400	661,000		660,250			

C 740 – 776 Mhz

US TV-Channel
 Ch. 59 (740-746 Mhz) Ch. 62 (758-764 Mhz)
 Ch. 60 (746-752 Mhz) Ch. 63 (764-770 Mhz)
 Ch. 61 (752-758 Mhz) Ch. 64 (770-776 Mhz)

Channel	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8
1	742,000	741,000	740,250	740,900	741,500	740,700	766,700	740,600
2	743,800	742,400	745,750	741,300	741,900	741,100	767,900	741,200
3	744,600	743,600	747,250	742,500	744,225	742,300	768,700	743,600
4	745,800	744,400	750,750	750,100	748,700	744,300	769,300	744,600
5	746,800	752,200	751,750	752,025	752,225	745,300	770,300	745,800
6	748,200	755,400	754,500	754,225	760,975	746,100	772,100	747,400
7	753,400	757,800	759,750	758,100	764,000	746,700	772,500	747,800
8	758,000	758,200	767,250	764,500	765,100			753,200
9	765,800	763,000	769,250	769,500	765,900			757,600
10	766,200	763,600	769,750	770,225	773,500			763,600
11	769,000	764,600	771,500	772,900	775,000			768,400
12	773,200	775,200	775,500					